

STEP 4 ENJOY YOUR **STREETSTRIDER**®



WHITE GLOVE SERVICE **8s QUICK SET-UP GUIDE**


FOR MORE INFORMATION

- VISIT WWW.STREETSTRIDER.COM/SUPPORT
- CONSULT YOUR OWNER'S MANUAL
- CALL US AT 800-348-0998

FOR MORE INFORMATION

- VISIT WWW.STREETSTRIDER.COM/SUPPORT
- CONSULT YOUR OWNER'S MANUAL
- CALL US AT 800-348-0998

STEP 1 UNPACK YOUR STREETSTRIDER 8s

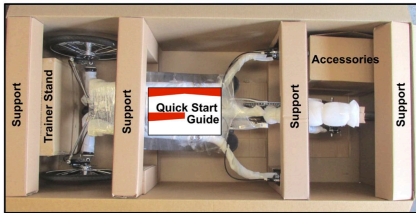

Your StreetStrider 8s comes assembled and folded in a freight box, held in place by several support boxes. Included are Owners Manual, tool kit, and spare inner tubes. If ordered, the trainer stand box is between the front wheels, and bundle items are included.



Remove the boxes, then lift the folded StreetStrider out of the freight box and place it on the floor. Remove packing materials, and locate the Owners Manual, spare parts, and bundle items.

STEP 2 UNFOLD YOUR STREETSTRIDER 8s



Raise the head tube while sliding the quick release (QR) clamp T-pin to the right. With the head tube in the full upright position, allow the QR clamp T-pin to insert into the hole. Rotate the QR stem to the vertical position so that the lever is against the head tube, then close the lever downward.



Raise the center strut up to the head tube and screw the brass coupling together.



STEP 3 REPOSITION THE LEFT CRANK ARM AND RELEASE THE BRAKES



Rotate both crank arms to the 6 o'clock position, lift the QR lever on the left crank arm to the horizontal position, rotate the lever 180°, and lower it to the left side of the crank arm.



Pull the left crank arm outward so that it just clears the end of the rectangular block. Rotate the right crank arm 180° to the 12 o'clock position. Slide the left crank arm back onto the block to full insertion.

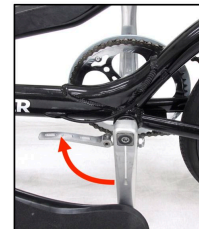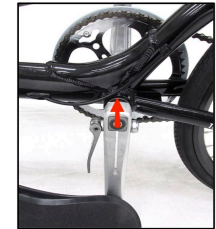

Lift the QR lever to the horizontal position, rotate it 180°, then close the lever. Finally, squeeze the brake levers to release the parking brakes.



STREETSTRIDER[®]
THE ELLIPTICAL THAT MOVES YOU!